

# MC6000 MKII Guide to PCDJ DEX3


## Top panel view




## Front panel view




## Effects Deck 1

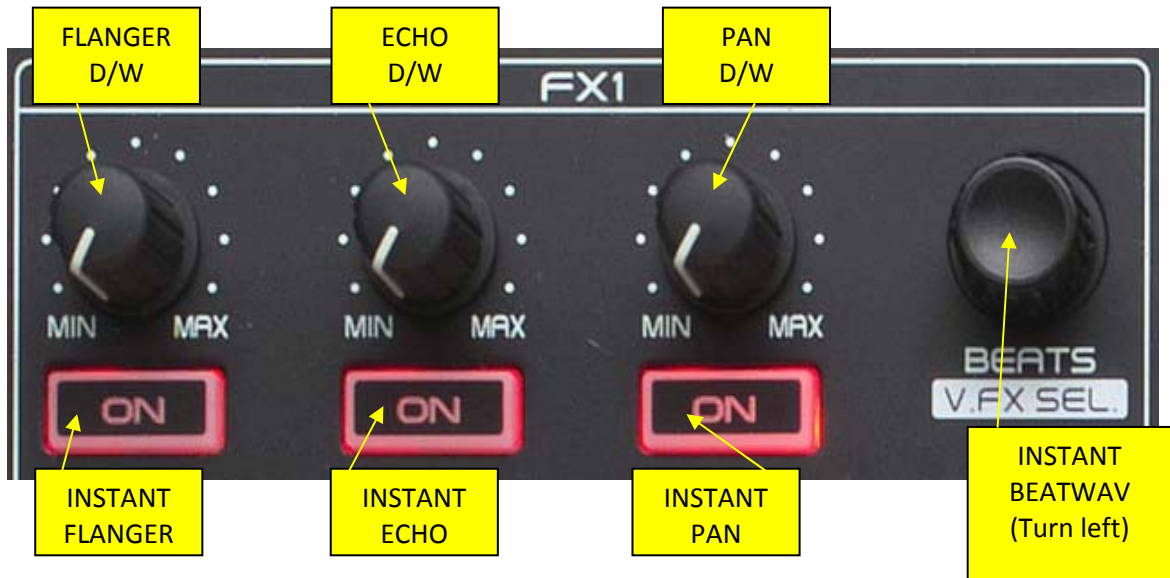


## Effects Deck 2

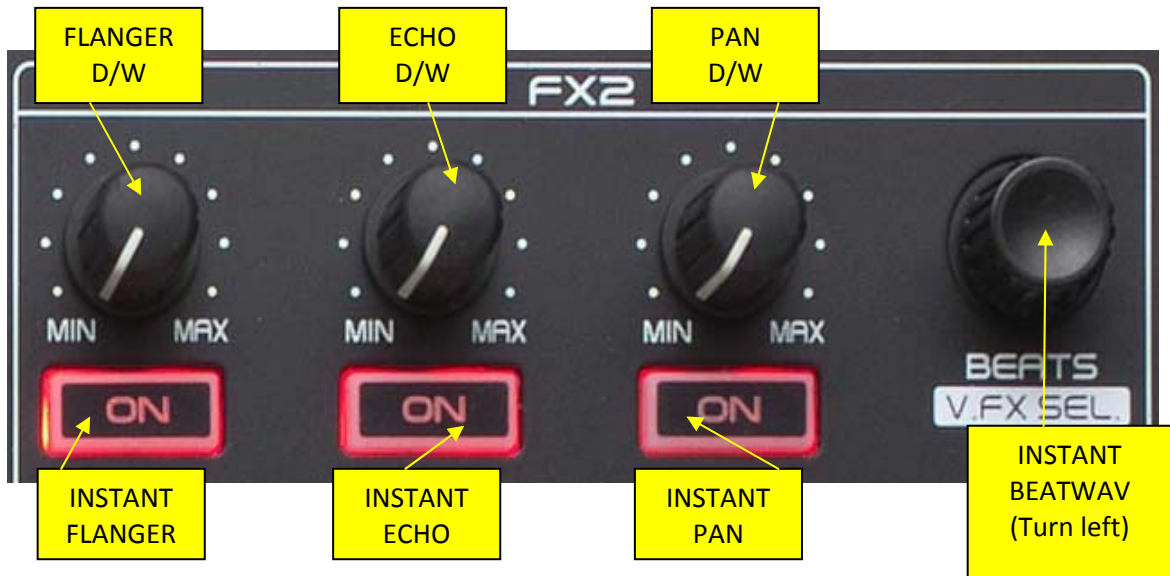


## Microphones 1 & 2

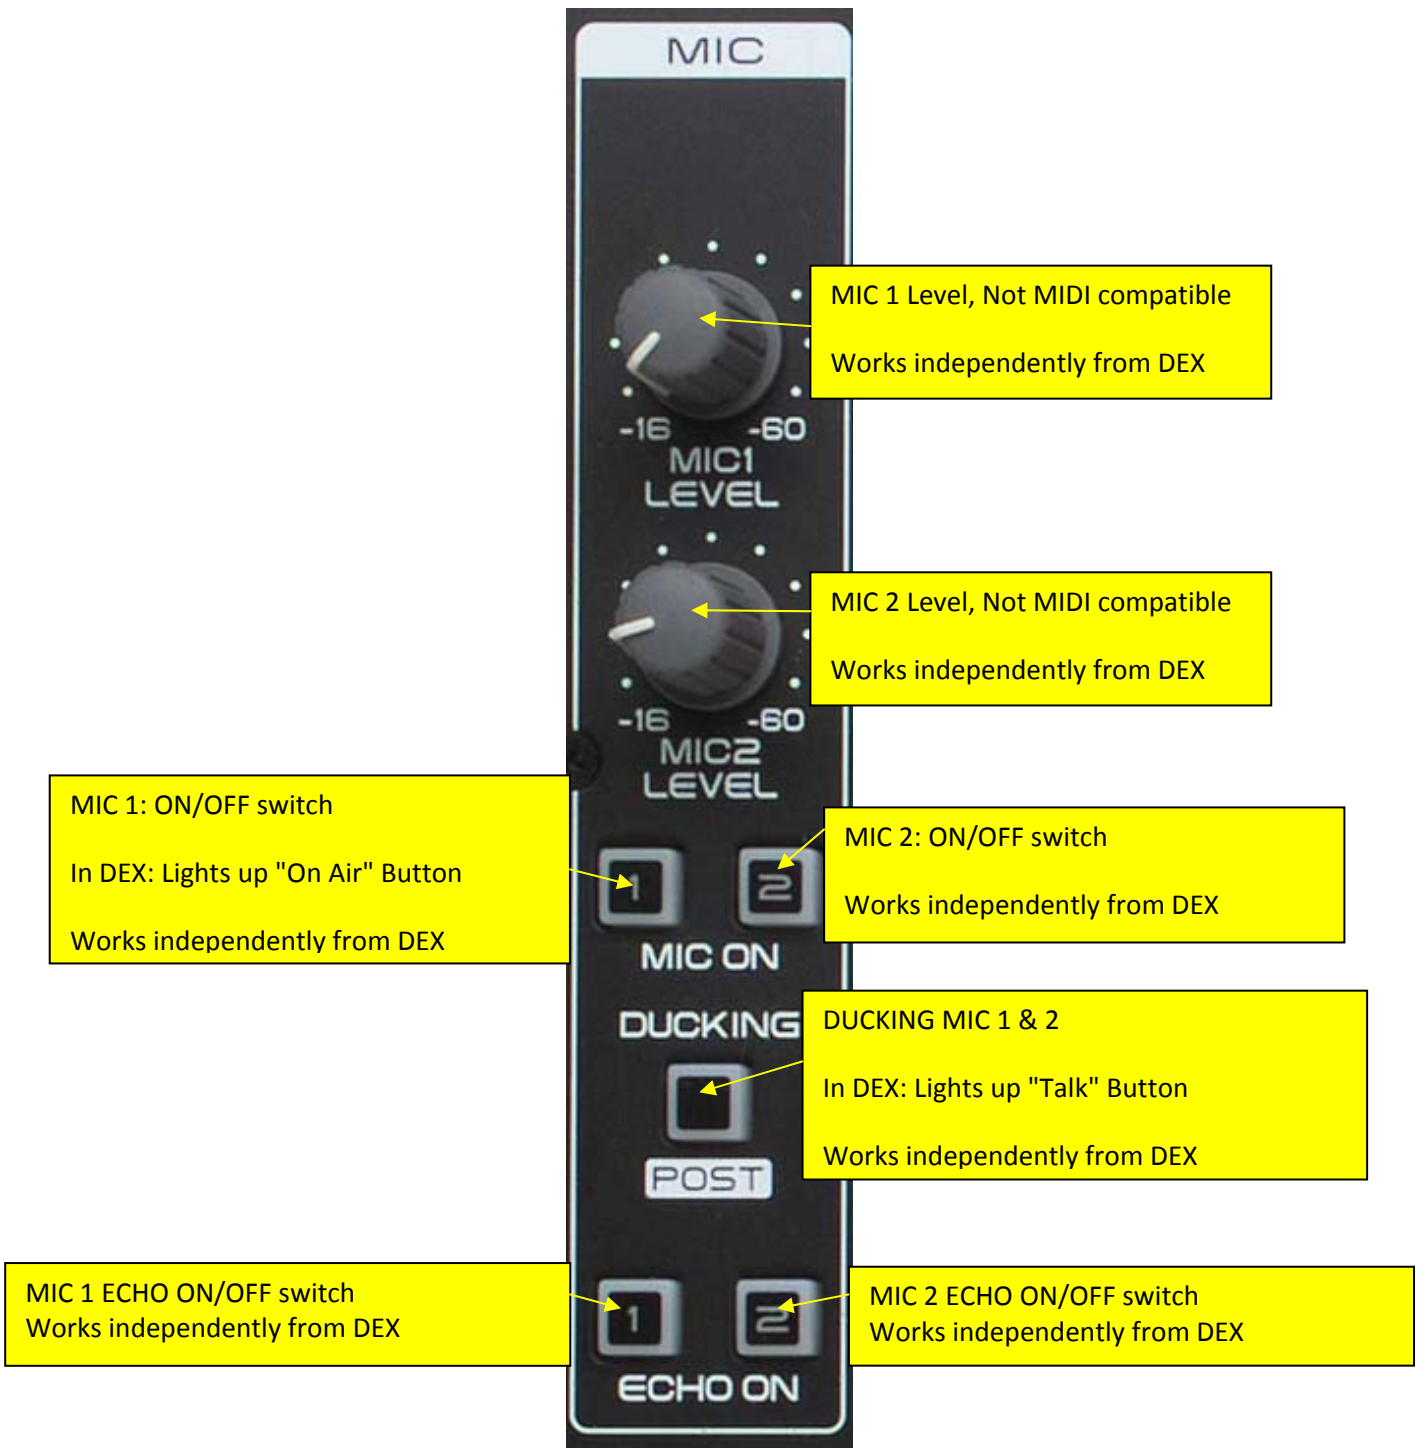


## Front panel: MIC 1 & 2 Equalizer

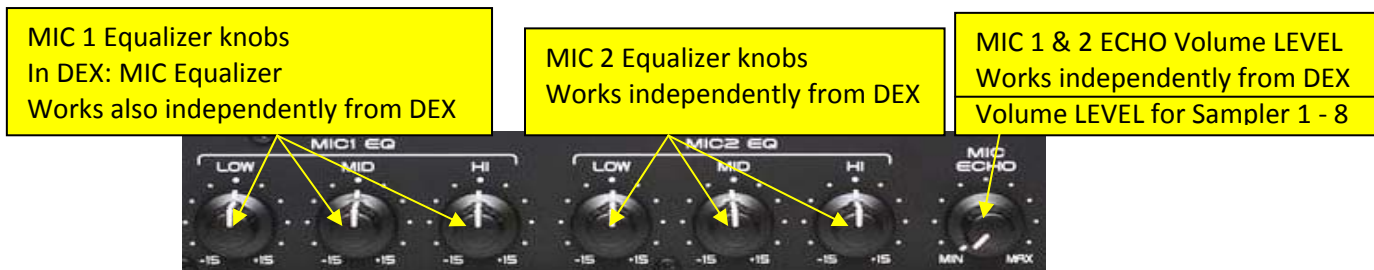


### LOOP Decks 1 & 3

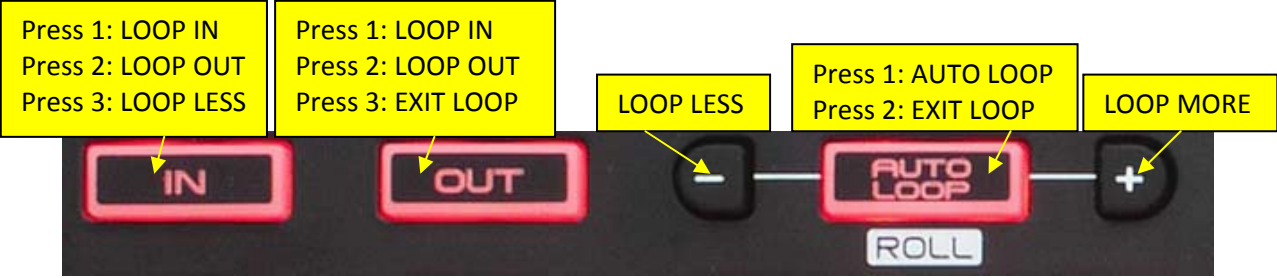

### LOOP Decks 2 & 4

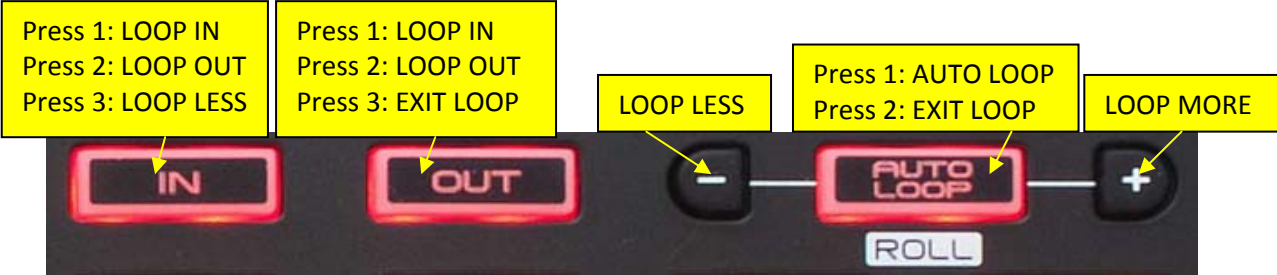


### Deck selector

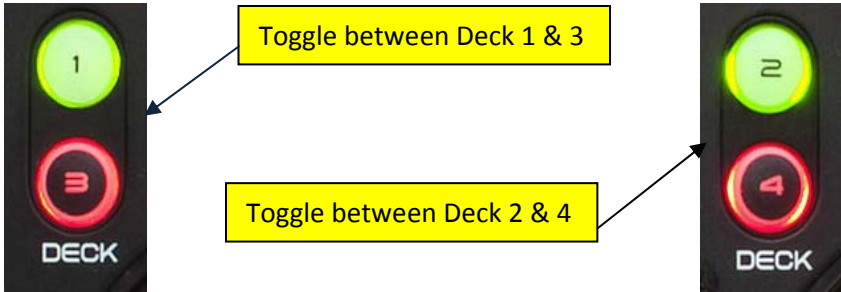

# Dual function buttons


Decks 1 & 3

Decks 2 & 4

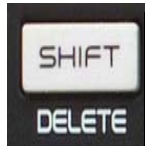


Press and Hold "SHIFT" to use the second function of the following buttons/sliders

function 2: Highlighted in RED

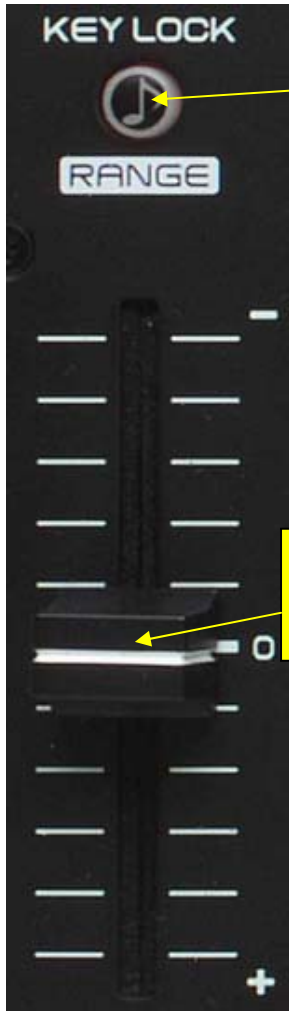

function 1: KeyLock

function 2: Pitch Reset

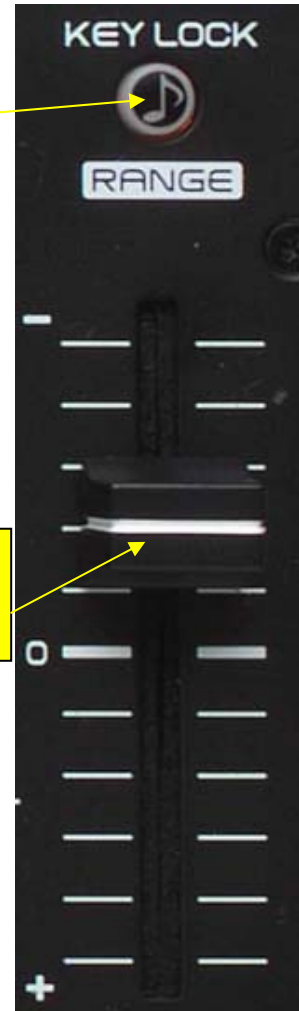


function 1: PITCH slider (alter tempo, not key)

function 2: KEY slider (alter key, not tempo)



function 1: Pitch Bend DOWN/UP

function 2: Fast Search LEFT/RIGHT

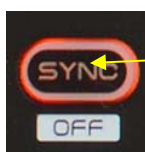


function 1: SyncPlay, Sync

function 2: BPM Match








**HOT Cue: Decks 1 & 3 / Sample**




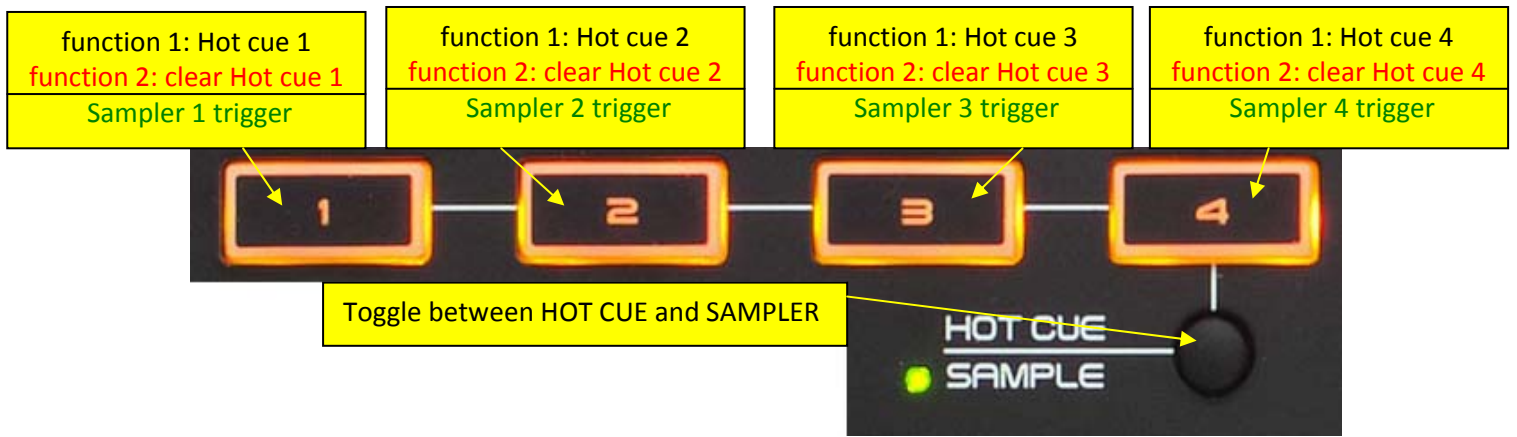


### HOT Cue: Decks 2 & 4 / Sample

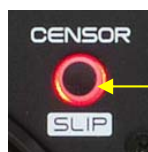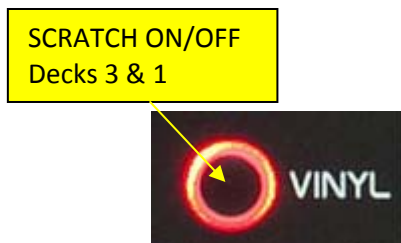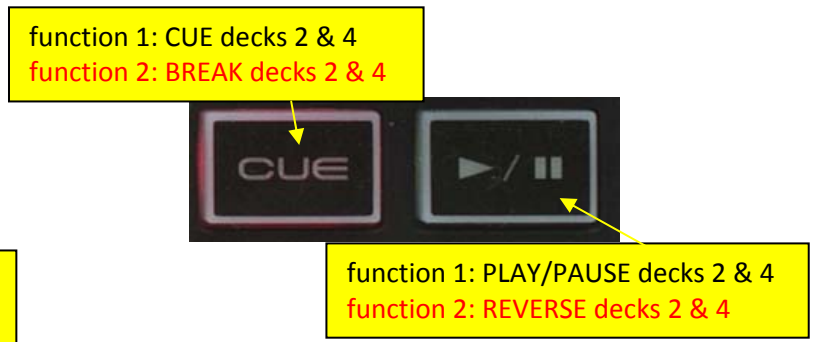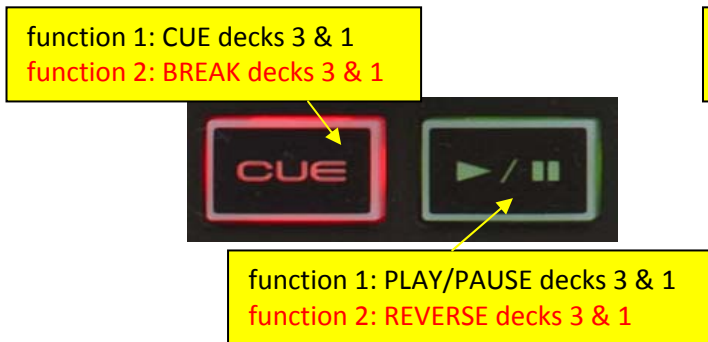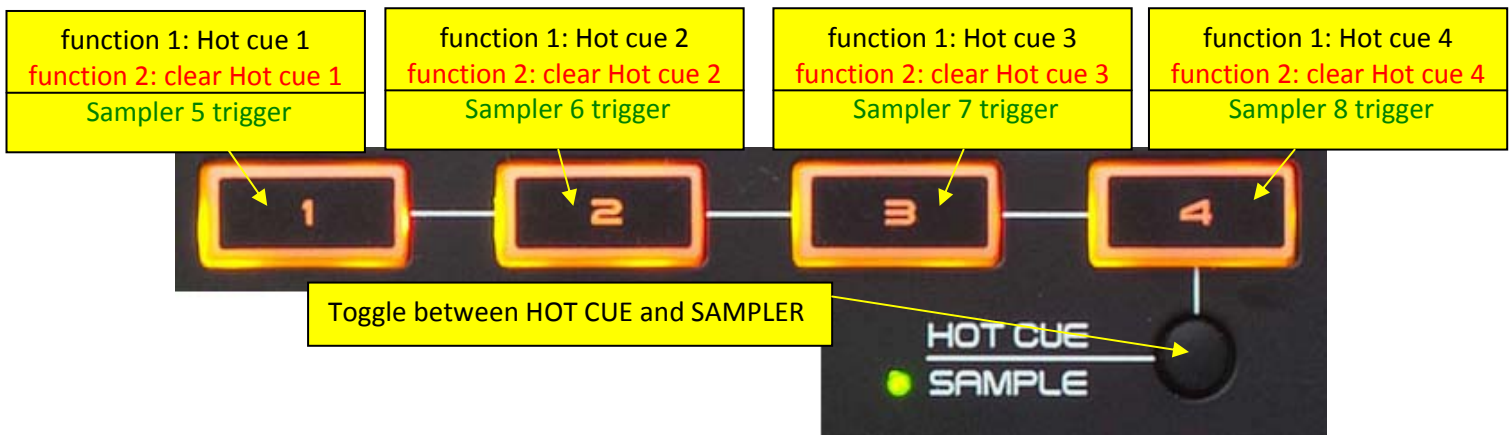


Not in use:  
Reserved for future SLIP  
feature in DEX

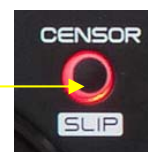

# Mixer

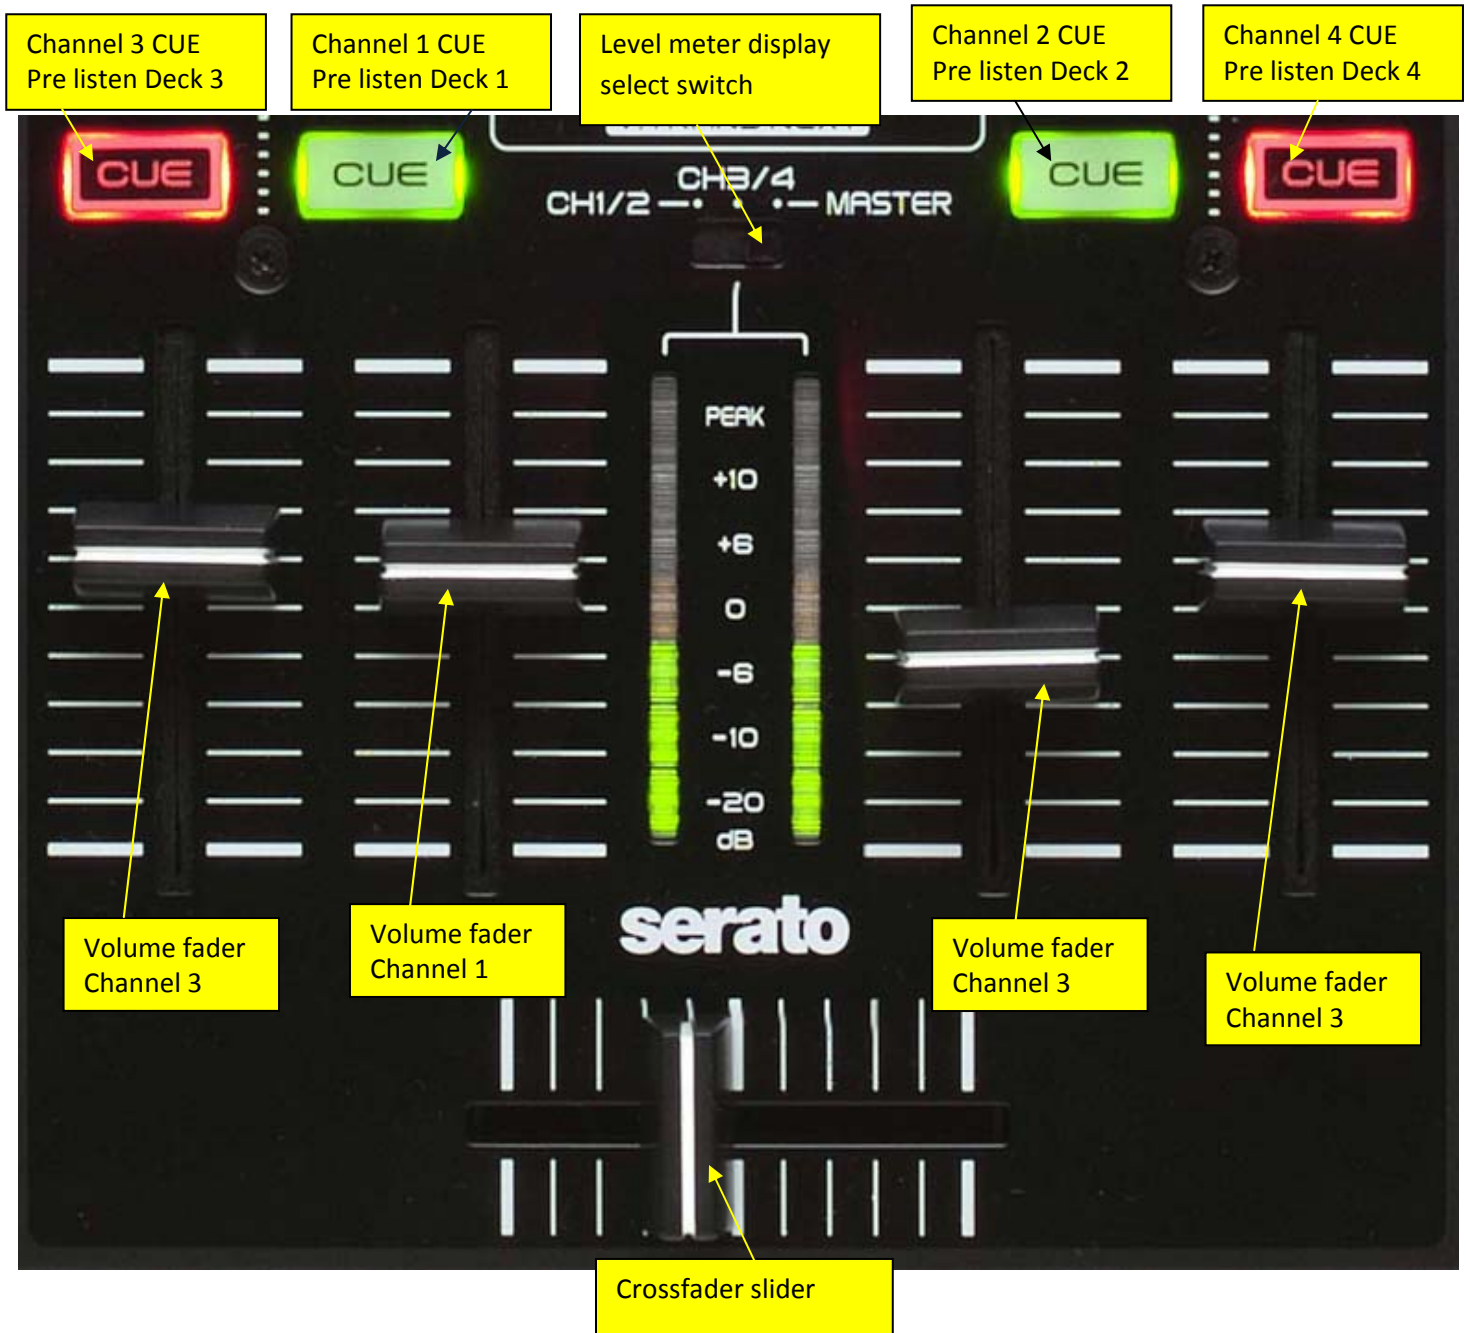


## Front panel: Headphones jack, level knobs, switches, crossfader curve knob

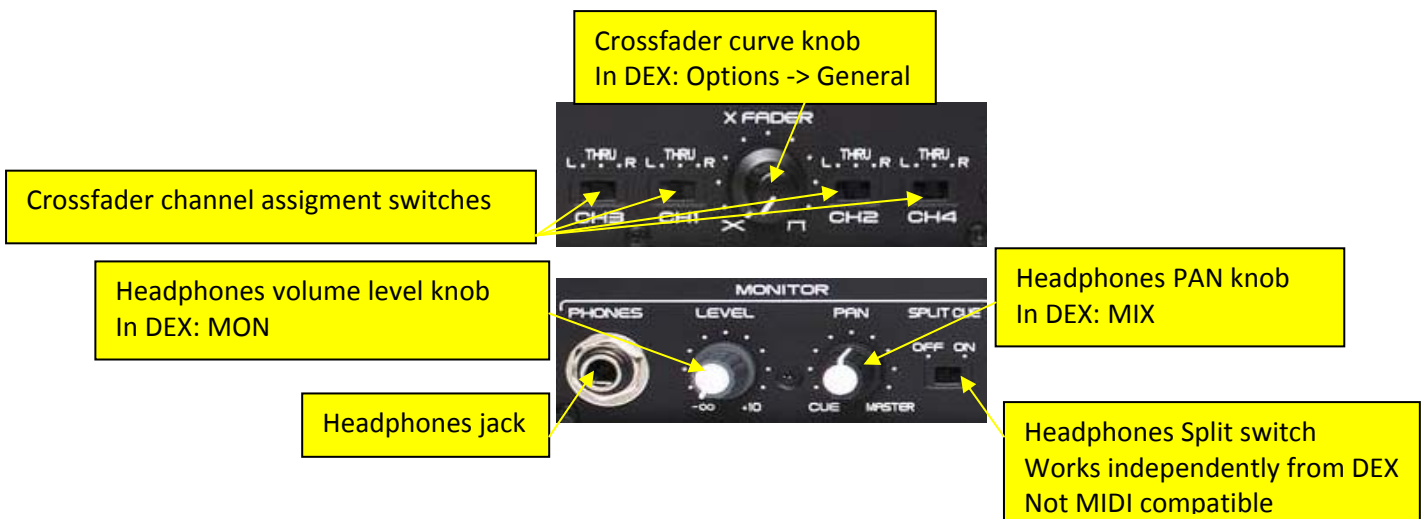

# Equalizer

Channels 3 & 1

Channels 2 & 4

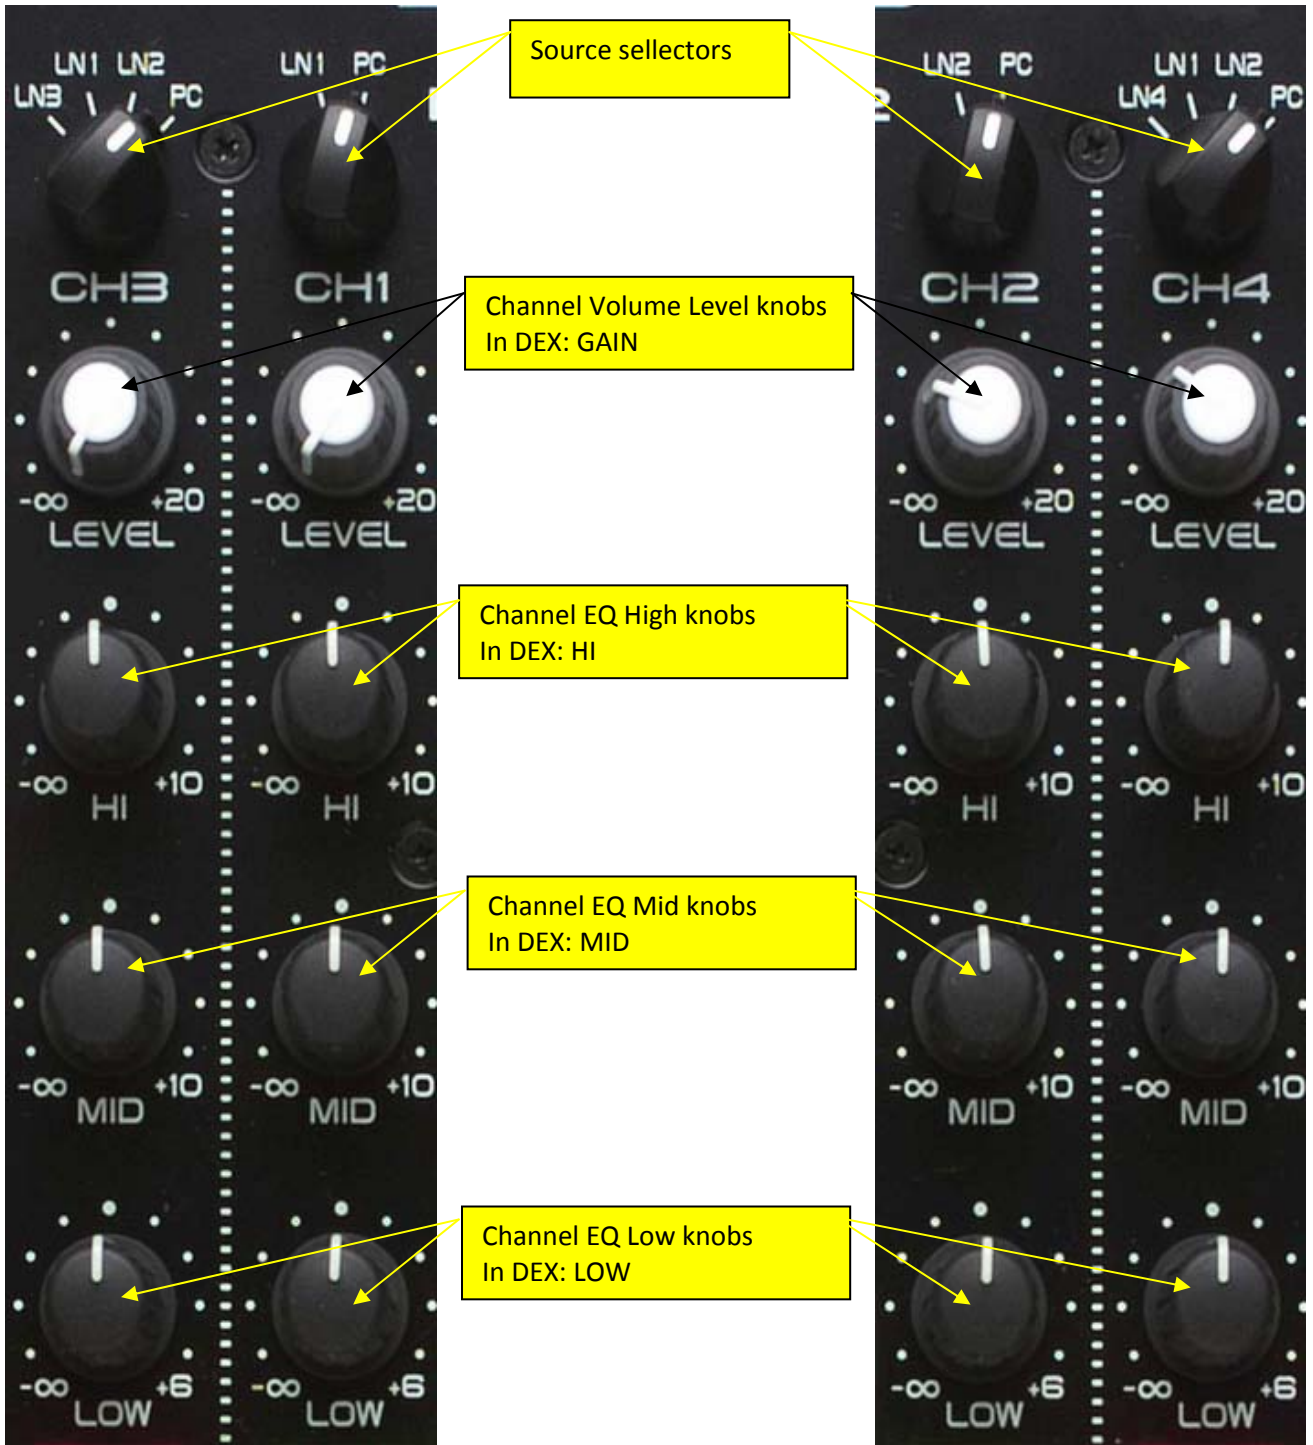



## Load song on Deck 1 - 4 / Browser, PlayList and SideList

Load song on Decks 3 & 1

Track select knob

Press:

Toggle between browser, Playlist & SideList

Turn Right: browse down selected list, browser

Turn Left: browse up selected list, browser

Load song on Decks 2 & 4

Go directly to Browser

Toggle between PlayList & SideList



## Cutoff filters Decks 1 & 2

CUTOFF Filter knob Deck 1

CUTOFF Filter knob Deck 2



Not in use at the moment

## Video & Audio Crossfader link / specific DEX functions

Options / Preferences window

AutoDJ

Not in use at the moment

Mix Now



X-F Link or Cross fader Link

Press 1: Audio Cross fader ON, Video Crossfader OFF

Press 2: Audio Cross fader OFF, Video Crossfader ON

Press 3. Audio Cross fader ON, Video Crossfader ON (Linked)

**Note: Works only if software Crossfaders are UNLINKED**

## Master Output, Booth Output

MASTER OUTPUT Volume level knob  
In DEX: VOL



BOOTH OUTPUT Volume level knob

BOOTH Source selector  
Not MIDI compatible