 


PCDJ MIDI Map  
 For: Pioneer DDJ-SX2  
 (09/28/2015 - Version 1.0)



Pad Modes: PCDJ supports 3 pad modes: Hot Cue, Roll (Saved Loops), and Sampler

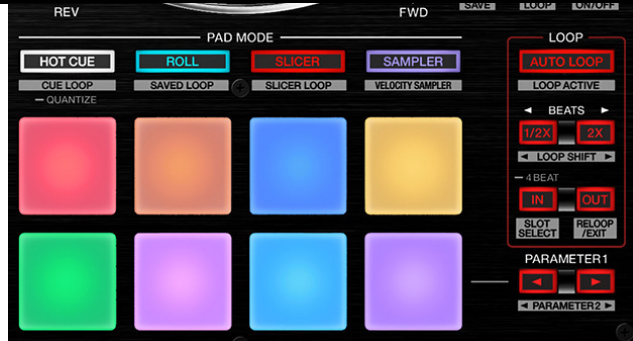

**Hot Cue (Cue Points):** When Hot Cue pad mode is enabled, pressing one of the pads when a track is loaded into the deck, will create a cue point at the current position of the loaded track. Pressing the same pad again will move the track to the saved cue point. Do remove a cue point, simply hold down the shift button while pressing the pad.

**Roll (Saved Loops):** When Roll (Saved Loops) pad mode is enabled, pressing one of the pads while in a loop will save the loop to that pad. PCDJ supports 5 saved loops.

**Sampler :** When Sampler pad mode is enabled, pressing one of the pads activates the sample assigned to that pad.

## Jog Wheel, Deck Control, and Tempo



**Slip/Vinyl:** The Slip/Vinyl button is used to switch the Jog Wheel between Pitch Bend mode, and Scratch Mode.

To enable or disable Scratch Mode, hold down shift and press Slip/Vinyl.

**Tempo Slider:** Adjust the Tempo slider either up or down to adjust the pitch/tempo for the currently playing track, within the 'Pitch/Tempo Range' that has been set in PCDJ Dex 3 or Red Mobile options menu.

**Adjust:** Pressing Shift + Adjust skips the track to the next bar.

**Slide:** Pressing Shift + Adjust skips the track to the previous bar.

**Deck Selection Control:** The deck control buttons (1 and 3 on the left deck, and 2 and 4 on the right deck) are used to alternate between the respective decks in PCDJ.

**Shift:** Held down when pressing another button that offers alternate functionality, accesses that alternate functionality.

## Browser, Master, Cue, Sampler Volume Controls



**Browser Knob:** The Folder/File Browser Button toggles between Folder List Browser Mode and File List Browser Mode.

The Knob, when turned allows you to navigate the highlighted Folder or File list, depending on which Browser Mode you've toggled.

**Sampler Volume Slider:** Adjusts the volume for the Sample

## Load, EQ, Filter, and Volume Controls



**Load:** The Load Deck Button serves two purposes: Select/Expand a folder to view the files/folders within (when in Folder Browser Mode), and to load the currently highlighted track into the respective deck (When in File Browser Mode)

**Trim:** Adjusts the Gain for the currently loaded track.

**Hi EQ:** Adjusts the High EQ setting for the currently loaded track.

**Mid EQ:** Adjusts the Mid EQ setting for the currently loaded track.

 
**Low EQ:** Adjusts the Low EQ setting for the currently loaded track.

**Filter:** Adjusts the HP/LP filter.

**Cue:** Allows you to listen to the currently playing track through the headphones, from the soundcard that you currently have selected in DEX 3 / Red Mobile 3 sound configuration options for previewing/monitoring.

**Deck Volume:** Adjusts the deck volume.

## FX, Needle Search, Keylock Controls

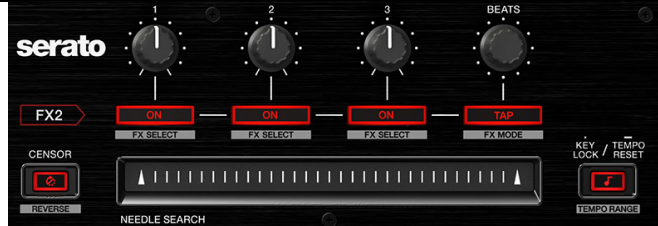

**FX 1 Select Knob:** The FX Parameter Knob allows you to adjust the Dry/Wet parameter of the Flanger Effect

**FX 1 Select On Button:** Enables/Disables the Flanger Effect.

**FX 2 Select Knob:** The FX Parameter Knob allows you to adjust the Dry/Wet parameter of the Echo Effect

**FX 2 Select On Button:** Enables/Disables the Echo Effect.

**FX 3 Select Knob:** The FX Parameter Knob allows you to adjust the Dry/Wet parameter of the Beatwaw Effect

**FX 3 Select On Button:** Enables/Disables the Beatwaw Effect.

**Tap Button:** Adjust BPM by tapping the button.

**Needle Search:** Sliding your finger across the Needle Search pad allows you to quickly search for a specific position in the currently loaded track.

**Sensor/Reverse:** Pressing Sensor enables the brake effect. Pressing Shift + Sensor (Reverse) enables the reverse effect.

**Key Lock / Tempo Range:** Enables/Disables Key Lock. Holding Shift while pressing this button will adjust the Tempo Range.

## Sync, Cue, Play/Pause

 


**Sync Button:** Tempo Matches Deck with Master Deck.

**Cue Button:** Goes to Cue point. Holding Shift + Cue goes to beginning of Track.

**Play/Pause Button:** When Paused or Cued, Plays the track. When playing, Cues the track.

## Loop Controls

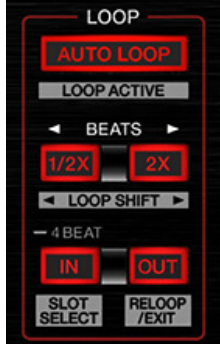

**Auto Loop:** Engages/Disengages the auto loop feature.

**1/2X:** Halves the size of the current loop. Pressing Shift + 1/2X shifts the loop back.

**2X:** Doubles the size of the current loop. Pressing Shift + 2X shifts the loop forward.

**In:** Sets the beginning of the loop.

**Out:** Sets the end of the loop.